



SK700

Single Oven

Installation, use and maintenance



Contents:

| | |
|---------|---------------------------------------------|
| 3 | Important information |
| 5 | Safety instructions |
| 6 | First use of the oven |
| 7 | Oven controls and use |
| 8 | Function table |
| 9 | Cleaning function |
| 10 | Electronic programmer/timer |
| 10 | Setting the current time |
| 10 | Minute minder function |
| 11 | Semi-automatic cooking |
| 12 | Automatic cooking |
| 14 | Safety key lock |
| 14 | Eco mode |
| 16 | Cleaning and maintenance |
| 17 | Removing the appliance door |
| 18 | Replacing the appliance door |
| 19 | Removing the inner door glass |
| 21 - 22 | Removing shelf supports, runners and liners |
| 23 | Changing the oven light bulb |
| 24 | Installation |
| 26 | Mains electrical connection |
| 28 | Troubleshooting |
| 29 | Energy Efficiency Information |

IMPORTANT: Please read the user instructions carefully before using the appliance for the first time and before installing it. Failure to install the oven as per the user manual could invalidate the warranty.

Important

This appliance must only be used for the purpose for which it is intended, i.e. domestic cooking. Any other use could be dangerous and may lead to premature failure of the appliance.

The CDA Group Ltd cannot be held responsible for injuries or losses caused by incorrect use or installation of this product. Please note that CDA reserve the right to invalidate the guarantee supplied with this product following incorrect installation or misuse of the appliance.

Under no circumstances should any external covers be removed for servicing or maintenance except by suitably qualified personnel.

User information:

- Ovens become hot during and immediately after use.
- The oven door can become very hot during operation.
- After use, please ensure that the oven switches are in the 'Off' position.
- Keep children away from the appliance when in use, and immediately after use.
- Do not allow children to play with or on the appliance.
- Keep the oven door closed whilst grilling.

Appliance information:

Please enter the details from the appliance rating plate on to the following page for reference, to assist CDA Customer Care in the event of a fault with your appliance and to register your appliance for guarantee purposes.

| | |
|-----------------|--|
| Appliance Model | |
|-----------------|--|

| | |
|---------------|--|
| Serial Number | |
|---------------|--|


EU Declarations of Conformity:

This oven has been designed, constructed and marketed in compliance with safety requirements of EU Directive 2014/35/EU (Low voltage) and requirements of EU Directive 2014/30/EU.

This appliance has been manufactured to the strictest standards and complies with all applicable legislation, including Electrical safety (LVD) and Electromagnetic interference compatibility (EMC). Parts intended to come into contact with food conform to 1935/2004/EC.

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2012/19/EU.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin. 

Important

- Read the user instructions carefully before using the oven for the first time.
- Follow the instructions for first use of the oven.
- Clean the oven regularly.
- Remove spills as soon as they occur.
- Always use oven gloves when removing shelves and trays from the ovens.
- Do not allow children near the oven when in use.
- Do not allow fat or oils to build up on the oven shelves, grill pan or oven base.
- Do not place any cooking utensils or plates directly on the oven base.
- Always grill with the oven door closed.
- Do not grill food containing fat without using the grill pan grid.
- Do not cover the trays or the oven walls with aluminium foil.
- Do not perform maintenance or cleaning of the oven without first switching off the electricity supply. If the oven has recently been used, allow to cool.
- Do not place hot enamel parts in water. Leave them to cool first.
- Do not allow vinegar, coffee, milk, saltwater, lemon or tomato juice to remain in contact with enamel parts.
- Do not use abrasive cleaners or powders that will scratch the surface of the enamel.
- Do not attempt to repair the internal workings of your oven.

First use of the oven

- The metal casing of this appliance has been coated with a preservative to protect it during transport and storage. This should be removed during installation by using a non-abrasive stainless steel cleaner. Always follow the instructions given with the cleaner being used. Remove all protective film from the oven accessories.
- Before using the oven for the first time we recommend that you clean the oven with soapy water and rinse carefully. **Set the current time on the programmer as per page 10.** Heat on each of the below programmes at maximum temperature for the specified time. A slightly unpleasant smell may be produced, caused by grease remaining on the oven elements from the production process.



15 minutes full grill



30 minutes fan oven

Please note:

- This oven has been fitted with a cooling fan to achieve maximum efficiency and to maintain low surface temperatures. The cooling fan will switch on automatically when the oven switches on. It is normal for the cooling fan to run for an hour or more after use, depending on the duration, temperature and type of cooking programme used.

Oven controls and use

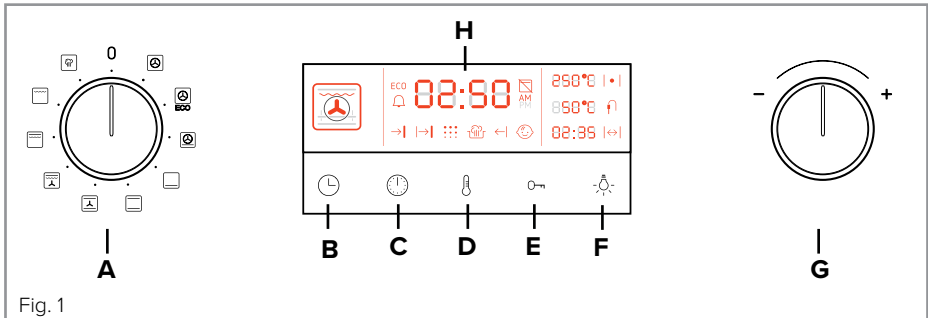



Fig. 1

- A** - Cooking function knob
- B** - Clock sensor
- C** - Timer sensor
- D** - Temperature sensor
- E** - Safety key lock sensor
- F** - Oven light sensor
- G** - Adjustment knob
- H** - Timer display





















IMPORTANT: You must set the current time on the oven programmer, as per page 10, for the oven to operate properly.

Cooking function knob (A)

To set a function, turn the cooking function knob (A in Fig. 1) to the required function. Most functions have a preset temperature (see page 8). The adjustment knob (G) can be used to change this (see below). Turn the knob left to lower the temperature and right to raise it.

If the temperature display next to the | • | symbol is flashing, then this indicates that temperature adjustment is available. Press the temperature sensor  to activate temperature adjustment. Once active, use the adjustment knob (G) to set the desired temperature and then either press the temperature sensor again or wait approximately 5 seconds.

Each of the oven functions uses different elements within the oven to offer you the best choice of cooking every time. These are explained on the quick reference table below. The levels referenced in the 'Default setting' column are the recommended shelf positions (numbers are on the oven cavity sides, behind the door, to aid you).

| Knob setting | Display indication | Oven functions | Default setting |
|-----------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|------------------------------------------|-----------------------------------|
| 1  |  | FAN | 170°C Level 3 |
| 2 ECO  |  | FAN ECO* | 170°C Level 3 |
| 3  |  | FAN + BOTTOM ELEMENT | 220°C Level 2 |
| 4  |  | BOTTOM ELEMENT (CRISPING) | 200°C |
| 5  |  | BOTTOM ELEMENT + TOP ELEMENT | 180°C Level 3 |
| 6  |  | BOTTOM ELEMENT + TOP ELEMENT + FAN | 170°C Level 3 |
| 7  |  | GRILL TOP ELEMENT FAN | 190°C Level 2 |
| 8  |  | GRILL TOP ELEMENT | 280°C Level 5 |
| 9  |  | GRILL | 280°C Level 5 |
| 10  |  | CLEANING | Bottom element 90°C 30 min. |

*ECO Fan Heater is an optimised heating function designed to save energy when preparing food.

When fan grilling, please note:

- Always grill with the oven door closed.
- The grill pan does not need to be as close to the grill as possible.
- Do not grill for more than 30 minutes at a time.
- Preheat the grill for up to five minutes with the oven door closed.

When grilling, please note:

- Always grill with the oven door closed.
- Put the grill pan as close to the grill as possible.
- Do not grill for more than 30 minutes at a time.
- Preheat the grill for up to five minutes with the oven door closed.

Cleaning function

This function heats a tray of water to approximately 90°C (for a preset time of 30 minutes) which will help to loosen any stubborn stains or dirt inside the oven and make it easier to clean the interior manually.

Use the baking tray (the shallower of the two supplied). Pour approximately 250ml (one glass) of water into the tray, insert it into the lowest shelf position and activate the function (function 10 on the table opposite). Once complete, an acoustic signal will sound. Wearing oven gloves, remove the baking tray, switch the power off at the mains supply and clean the interior as per the cleaning and maintenance section (page 16).




Remember that the oven interior will be hot to the touch, exercise extreme care and always wear adequate Personal Protective Equipment (PPE).

Electronic programmer/timer

This oven's electronic timer is equipped with touch control sensors. Each registered touch of a sensor field is confirmed by a single beep. It is advisable to keep the sensor fields clean at all times to avoid errors in operation.

Setting the current time





After connection to the mains supply, or re-connection after a power outage, the display will show '24hr'. Use the adjustment knob (G in Fig. 1) to change between 24 hour time display and 12 hour time display.

- Press the clock sensor . Use the adjustment knob (G) to set the number of hours.
- Press the clock sensor  again. Use the temperature control knob (G) to set the time in minutes. Press the clock sensor  again to confirm entry.

Please note: The time must be set for the oven to work.

Setting the minute minder function

The minute minder function can be set at any time whilst a function is active. The minute minder can be set anywhere from 1 minute to 23 hours and 59 minutes.



- Press the timer symbol . The  symbol on the display should flash and the time display should show '00:00'.
- Set the desired duration of the minute minder using the adjustment knob (G). Touch the timer symbol  and the minute minder will be set. The  symbol will be solidly lit. The current time will be shown on the timer display.

- Press any of the sensors in order to deactivate the acoustic signal that sounds once the minute minder time has elapsed.

Please note: The acoustic signal, if not switched off manually, will deactivate automatically after approximately 1 minute.

Cancelling the minute minder function






The minute minder function can be cancelled at any time.



- Press the timer  sensor until the  symbol is flashing. Then, use the adjustment knob (G) to return the minute minder time to '00:00'.


Semi-automatic cooking

This function allows for a cooking time to be set. When the set time elapses, the oven will switch the set function off and an acoustic signal will sound to alert the user. The cooking time that can be set ranges from between 1 minute and 10 hours.

To switch on semi-automatic cooking

- Set the desired oven function and temperature.
- Touch the timer  sensor until the  symbol flashes. The timer display should show '00:00'.
- Set the required cooking time using the adjustment knob (G). The cooking time that can be set ranges from between 1 minute and 10 hours.
- Touch the timer  sensor to confirm and activate the function. You will then go to the delay timer section, denoted by the  symbol. Ignore this and press the timer  sensor again.

Once active, the timer display will show the current time and the  symbol will be lit. The display next to the  symbol will show the time until cooking ends.

- At the end of the cooking duration, an acoustic signal will sound for approximately 1 minute, touch any sensor to cancel this. The timer display will flash '00:00' and the  symbol will flash until you switch the function knob to the off position ' 0 ' .



To cancel semi-automatic cooking







The semi-automatic function can be cancelled at any time. To do this, simply switch the cooking function knob (A) to the off position ' 0 ' .

Automatic cooking

This function allows for a duration and an end time to be set for cooking. With this, the oven will start cooking automatically due to the set duration determining how long before the end time that the function will activate and begin cooking. For example, if you set the cooking duration to 1 hour, and the end time to 15:30, then the oven will activate the function at 14:30. When the set time elapses, the oven will switch the set function off and an acoustic signal will sound.

To switch on automatic cooking

- Set the desired oven function and temperature.
- Touch the timer  sensor until the  symbol flashes. The timer display should show '00:00'.
- Set the required cooking time using the adjustment knob (G). The cooking time that can be set ranges from between 1 minute and 10 hours.

- Touch the timer  sensor to confirm and, with the  symbol flashing, set the time at which you'd like cooking to end/the oven to switch off using the adjustment knob (G). The end of cooking time can be set no more than 23 hours and 59 minutes ahead of the current time.
- Touch the timer  sensor and the automatic function will now be set. The display next to the  symbol will show the time at which the oven will turn on to begin cooking. Once cooking has begun, this display will show the remaining cooking time.
- Once the end of cooking time has been reached an acoustic signal will sound. '00:00', the  symbol and the  symbol will flash on the timer display. To deactivate the acoustic signal, press any of the sensors. Alternatively, the signal will deactivate automatically after approximately 1 minute.
- Switch the cooking function knob (A) to the off position ' 0 ' to deactivate the function properly and stop the flashing symbols.

To cancel automatic cooking



The automatic function can be cancelled at any time. To do this, simply switch the cooking function knob (A) to the off position ' 0 '.

Please note: It is not possible to adjust the time (of day) setting whilst the semi-automatic and automatic cooking functions are operational.



Safety key lock

The safety key lock is intended to help prevent accidental use or activation of the oven. Once locked, the oven should not respond to any controls except for the unlocking sequence. You can use the safety key lock feature when the cooking function knob is set to the off position '0'.

To activate the safety key lock

- Ensure the cooking function knob is set to the off position '0'.
- Touch and hold the safety key lock sensor  for approximately 3 seconds. An acoustic signal should sound and the  symbol should illuminate to confirm that the lock is active.

To deactivate the safety key lock


- Ensure the cooking function knob is set to the off position '0'.
- Touch and hold the safety key lock sensor  for approximately 3 seconds. An acoustic signal should sound and the  symbol should extinguish to confirm that the lock is now inactive.

Eco mode


The eco mode is designed to reduce the overall energy consumption of the appliance. It does this by switching off elements 5 minutes before the end of cooking time and uses the residual heat within the oven cavity to cook for the remaining time. This mode is activated automatically with some functions and is indicated by the **ECO** symbol.


Interior light

The interior light should activate when:

- The cooking function knob is set to a function.
- The oven door is opened (it will remain on for approximately 10 minutes).
- You touch the oven light sensor  if the light is not already on.

The interior light should deactivate when:

- The cooking function knob is set to the off position ' 0 ' and the door is closed.
- Automatically after 30 seconds if the door is closed or 10 minutes if the door is open.
- You touch the oven light sensor  if the light is not already off.

You can set the interior light to come on permanently during a function. To do so, simply touch and hold the oven light sensor  for approximately 3 seconds. Simply touch the sensor again to switch it off.

Active pause

Opening the door whilst any of the heating functions are active will cause said function to pause until the door is closed. If the door is open for longer than approximately 30 seconds, an alarm will sound to alert you. Touch any control or close the door to switch the alarm off.

Remember that the less you open the oven door during operation, the lower the energy consumption will be.

Cleaning and maintenance

Keeping your oven clean and well maintained helps to prolong the fault-free lifespan of it. It is important that, before any cleaning or maintenance is performed, you switch off the oven at the mains supply. Do not start any cleaning or maintenance until the oven has been allowed to cool completely.

We recommend always wearing PPE (Personal Protective Equipment) when carrying out any cleaning or maintenance.

Cleaning the oven exterior

As the oven has a stainless steel or enamel surface, you should use a nonabrasive cleaner. Any abrasive cleaner (including Cif) will scratch the surface and could erase the control panel markings. Stainless steel can be effectively cleaned by simply using a dilute solution of water and mild detergent and drying to a shine with a clean cloth.

Proprietary stainless steel cleaners are available. We recommend a microfibre cloth for stainless steel surfaces. If necessary, wipe any area that has been cleaned using a damp soft cloth or tissue to remove any residual cleaning fluid and then wipe dry with a clean, dry cloth or tissue (such as kitchen towel).

Cleaning the oven interior

The oven should always be cleaned after use when it has been allowed to cool down.

The cavity should be cleaned using a mild detergent solution and warm water and then wiped dry with a suitable, clean cloth.

Suitable proprietary chemical cleaners may be used after first consulting with the manufacturers' recommendations and testing a sample on a small area of the oven cavity. Abrasive cleaning agents or scouring pads/cloths should not be used on the cavity surface.

IMPORTANT:

- **Steam cleaners must not be used when cleaning this appliance. You can use the cleaning function (page 9).**
- **Once care and maintenance is complete, ensure that all parts are correctly replaced before using the oven.**

Removing the appliance door

In order to allow for easier access into the oven cavity for cleaning, it is possible to remove the door. Before removing the door, ensure that you have an area prepared in which you can place the removed door. This area should ideally be protected by something like a folded, dirt-free, towel to help prevent damage to surfaces and the door.

- Open the door fully
- Lift and tilt the safety catch part of the hinge (fig. 2) so that it is fully extended and points towards the door.
- Close the door most of the way, lift it slightly and then pull it, safely but firmly, towards you.



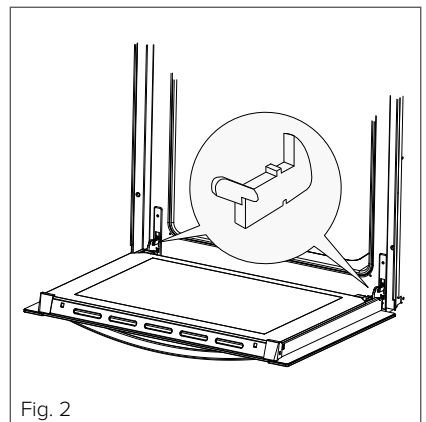


Fig. 2

Replacing the appliance door

- Hold the door to the appliance in the closed position and manoeuvre the hinges so that the part of the hinge, highlighted by the star in fig. 3, inserts into the hinge slot in the cavity frame.
- Next, ensure the notch on the underside of the hinge sits on the lip of the hinge slot. Open the door fully. Each hinge should be seated in the same way as the hinge in fig. 4. If it is not, follow the steps for removing the door and try replacing it again.
- Finally, lift the safety catch part of the hinges back into place so that they are lying flat against the hinges.

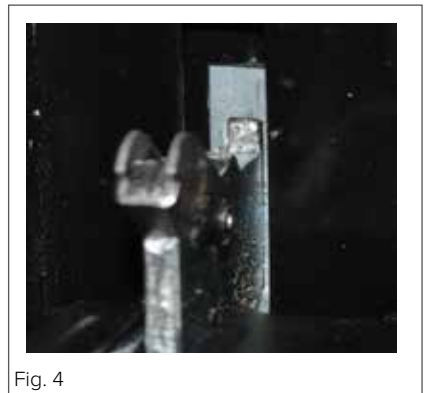
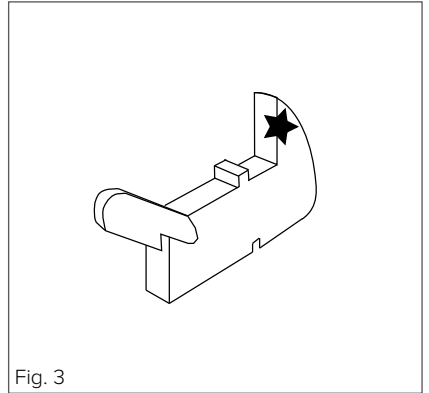


Please note: If the hinge safety catches are not in the correct place then the door and/or appliance may receive damage when attempting to close the door.


Removing the inner door glass

With the door removed, the inner glass can also be taken out for cleaning purposes.

- Use a flathead screwdriver or to unhook the door slat, as shown in fig. 5
- Remove the door slat, as per fig. 6, and place it somewhere safe where it will neither receive nor cause damage.
- Remove the inner glass from the blocks it is seated within (near to the hinges) and place this somewhere safe also. Pay attention to the way that the glass is facing as it will need to be replaced in the same direction. The smooth surface of the glass should be facing upwards (inwards if the door was back in place) with the patterned side facing the oven door handle.
- Clean the door glass with warm, soapy water and wipe dry with a clean microfibre cloth.
- The middle pane of glass can also be removed but it is important that this pane is reinserted facing the same way that it was when removed.

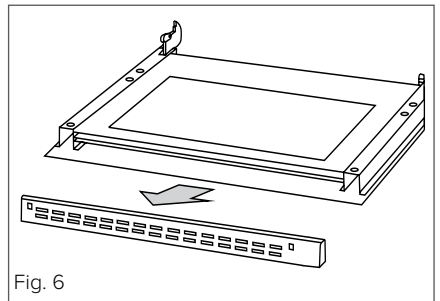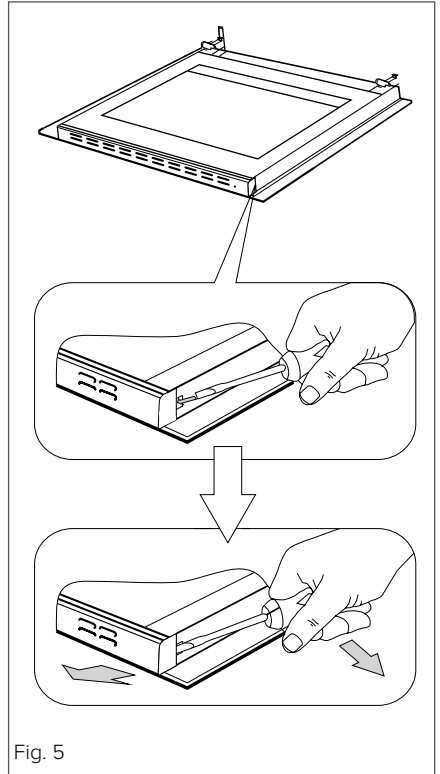

- There are a number of rubber guides attached to the inner pane and these must be returned to their original positions when reassembling the door. Fig. 7 shows these guides and their position on and around the inner glass.
- Simply reverse these steps in order to reassemble the door. Take care when reattaching the upper door slat. Place the left side on first until you hear a ‘click’ as it connects and then attach the right side. **This will help to avoid damaging the door and/or glass.**

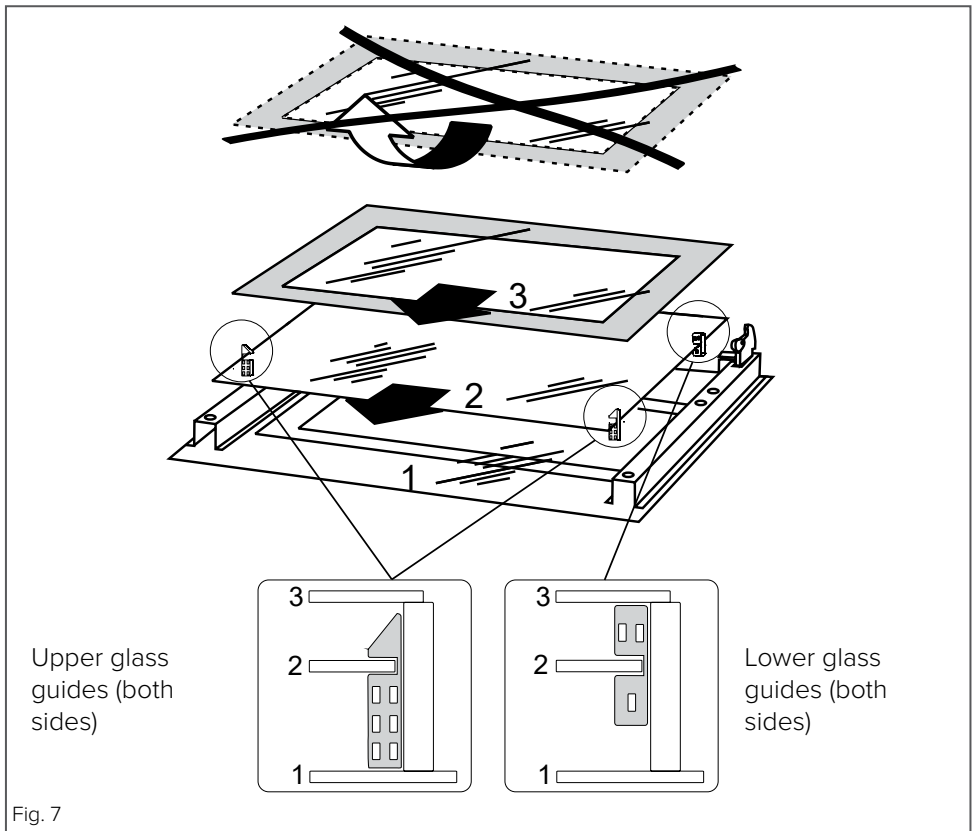

Important: Do not disassemble the door without it having been removed from the oven. Weight differences could cause the door to snap shut, causing damage to the oven and/or the user.

Removing the shelf supports

Important:

Always remember to allow the oven to cool sufficiently, if it has been in use, before carrying out any maintenance. Remove the telescopic runners first (page 22).

To remove the shelf supports

- Take a firm hold of the shelf support in the middle. Place your thumb against the oven wall and lever the support out of the support holes (Fig. 8)
- Tilt the shelf support outwards (Fig. 9) and you should then be able to remove the shelf support arms that secure it into the cavity walls at the back.



Fig. 8



Fig. 9

To replace the shelf supports

- Simply carry out the above steps, but in reverse order.


Please note:

Take care not to damage the enamel walls of the oven, particularly around the shelf support arm holes.


Removing the telescopic runners

The oven's telescopic runners should be removed prior to the shelf supports.

Removing the telescopic runners

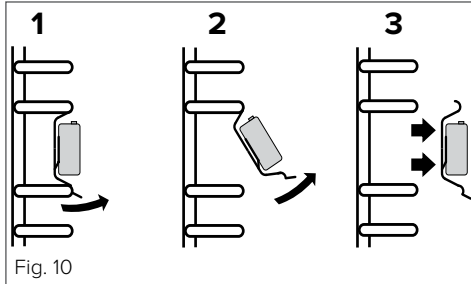

Replacing the telescopic runners

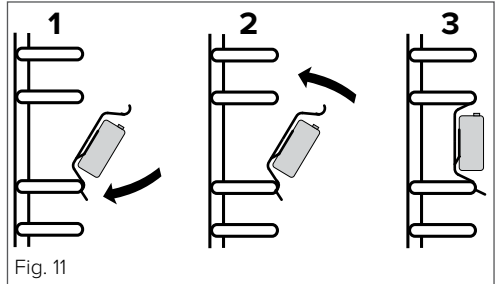


Removing the catalytic liners

The oven's catalytic liners can be removed for cleaning or replacement. Under normal use, the liners should keep themselves clean but stubborn or burnt on food/stains may mean they need to be cleaned or replaced. To aid the cleaning of them, you can run the oven on a heating function (such as fan) for 1 hour at 250°C.

Once the liners begin losing the ability to clean, they should be replaced.

Remove the screw in the centre of the liner as per Fig. 12 and remove the liner.

When replacing the liner, do not over-tighten the screw as you could damage the liner and oven.

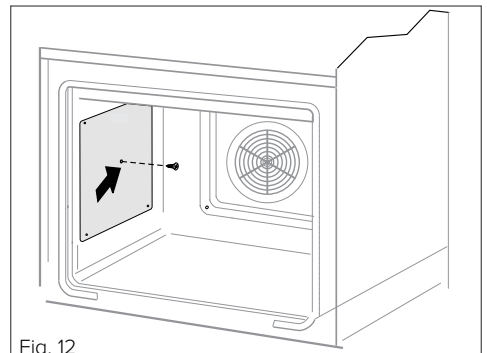

Changing the oven light bulb

Important:

Before any maintenance is started involving electrical parts, the appliance must be disconnected from the power supply.

If the oven has been in use, let the oven cavity and the heating elements cool down before attempting any maintenance.

Never use screwdrivers or other utensils to remove the light cover. This could damage the enamel of the oven or the lamp holder. Remove only by hand.

Never replace the bulb with bare hands as contamination from your fingers can cause premature failure. Always use a clean cloth or gloves. Old bulbs may also be hot!

Changing the bulb (fig. 13)

- Unscrew the protective cover.
- Carefully extract and replace the bulb with the new one suitable for high temperatures (300°C) having the following specifications: 230-240V, 50Hz, 25W G9 fitting.
- Refit the protective cover.

Please note:

The bulb replacement is not covered by your guarantee.

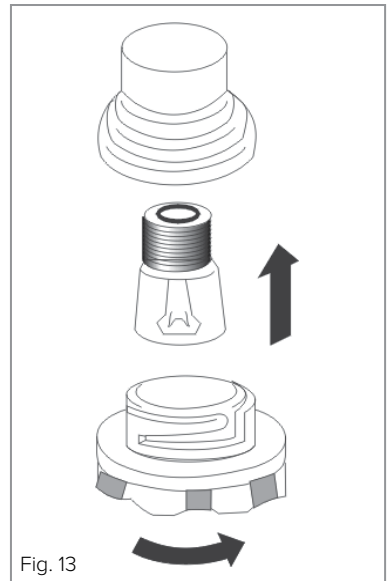


Fig. 13

Installation

Important! If installing this oven below a hob, ensure that the air gap between the two appliances is observed. This gap is usually detailed in the hob's manual.

The installation of this appliance must be carried out by a suitably qualified person. We recommend seeking the help of another person for the installation process.

If the oven is being installed into a built under oven housing unit ensure that the front rail at the top of the unit is not installed as it could restrict ventilation.

Ensure that air can flow freely around the housing area. If the oven is being installed into a fully enclosed built-under oven housing unit it may be necessary to cut a small slot in the top of the plinth fitted under the unit. Cut a section 400 mm

wide and a minimum of 15 mm high to allow air to pass under the unit. Alternatively cut a section 400 x 450 mm in the base of the carcass as indicated in Fig. 14.

Failure to allow adequate ventilation to the appliance may result in overheating or damage to adjacent units and could invalidate the warranty.

This appliance is type X installation.

The walls of the kitchen units must be able to withstand temperatures

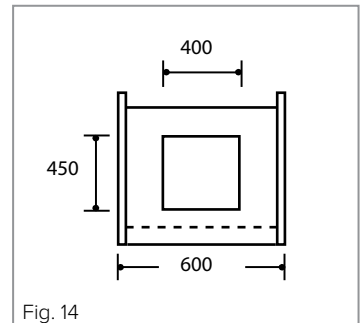


Fig. 14

of 100°C +.


When correctly installed ensure that there is a gap of 4 mm minimum between the sides of the oven and adjacent furniture doors.

How to install your oven

You will need the housing area in fig. 15 to fit your oven correctly.

The oven is designed to fit into a cabinet of 600 mm width. The oven can be built in or built under the kitchen units, but you must ensure that it is properly ventilated. In the diagram below the built-in oven is ventilated by means of a space at the top of the kitchen cabinet. There are many other methods of ventilating your oven - consult a qualified engineer for advice.

Lift the oven carefully into position on the shelf, taking care NOT to lift it by the door handle. If you lower the oven door, you will see 4 screw holes, 2 on each side of the oven (image B fig. 15). The oven should then be secured to the housing by securing screws into these holes. Remember the housing should not be free standing but be secured to the wall and/or adjacent fittings.

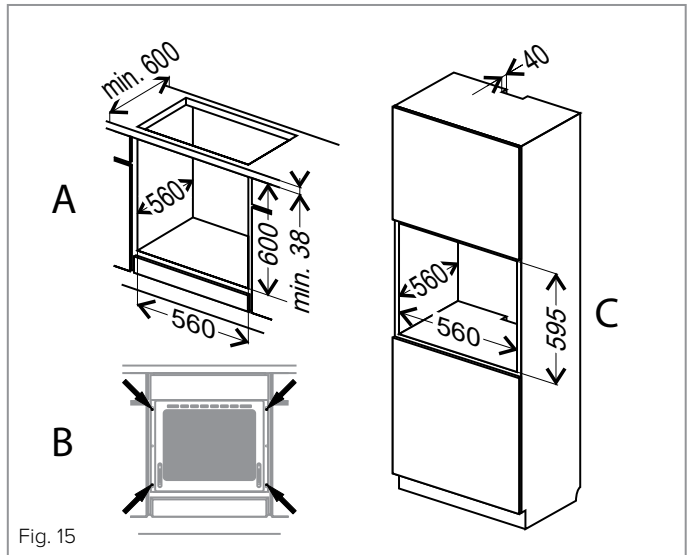

Adjusting the oven door

Whilst installing the oven, you may wish to adjust the final position of the door. The following allows for $\pm 1.5\text{mm}$ adjustment:

- Loosen the nut (1) with a size 13 spanner.
- Use a size 4 allen key to rotate the spindle (2) in a 180° range.
- Once adjustment is complete, tighten the nut (1) whilst holding the allen key in place in the spindle (2).

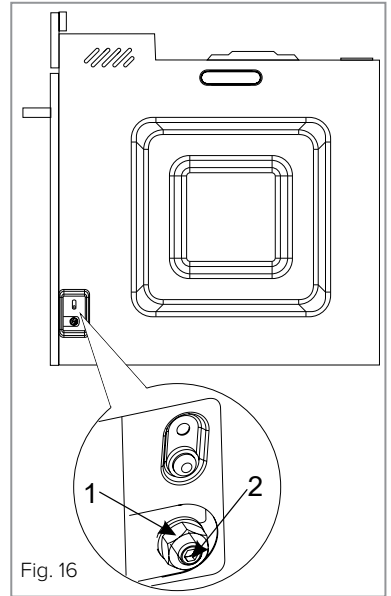


Fig. 16

Mains electrical connection

Warning! This appliance must be earthed.

This appliance is intended to be connected to fixed wiring by a double pole switch, having a contact separation of at least 3mm in all poles and protected by a 13A fuse. The switch must be positioned no further than 2m from the appliance.

We recommend that the appliance is connected by a qualified electrician, who is a member of the N.I.C.E.I.C. and who will comply with the I.E.T and local regulations. The wires in the mains lead are coloured in accordance with the following code:

GREEN AND YELLOW = EARTH BLUE = NEUTRAL BROWN = LIVE.

As the colours of the wires in the mains lead for the appliance may not correspond with the coloured markings identifying the terminals in your spur box, proceed as follows:

1. The wire which is coloured green and yellow must be connected to the terminal marked E (Earth) or coloured Green.
2. The wire which is coloured blue must be connected to the terminal marked N (Neutral) or coloured Black.
3. The wire which is coloured brown must be connected to the terminal marked L (Live) or coloured Red.

Please note:

- The mains cable must only be replaced by a qualified electrician or service engineer and must be of equivalent or better rating (i.e. 3 x 1.5 mm², HO5VV-F).
- This appliance is intended to be connected to the mains supply with a cable of cross sectional area 1.5 mm².
- The current rating of the fuse or circuit breaker protecting this appliance should be marked on the socket outlet.
- Assembly and electrical connection should be carried out by specialised personnel.
- When installing this product we recommend you seek the help of another individual.
- Should the mains cable be damaged or need to be replaced, it should only be done so by a qualified electrician or engineer. The terminal block on the appliance is clearly marked with regards to the positions of live, neutral and earth.

Appliance electrical rating: 2800W

Troubleshooting

| Problem | Reason | Remedy |
|--------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| 1. The appliance does not work | No power | Check the power supply and the fuse, replace if blown. |
| 2. Oven lighting does not work. | Loose or damaged bulb | Replace the blown bulb (see Cleaning and Maintenance on page 23). |
| 3. E00 error | Oven temperature reading error | You cannot use the oven, please refer the repair to the nearest service centre. |
| 4. Fan does not work | Risk of overheating! Immediately unplug the appliance or switch off the main circuit breaker. Refer the repair to the nearest service centre. | |
| 5. Oven has power but is not heating | Ensure the clock has been set (see page 10). Automatic cooking may be set (see page 12). | |

If any of the above steps do not resolve your issue, please contact CDA Customer Care to arrange a repair. Contact details are below. Please have to hand all the details from your appliance's rating plate which can be found on the back of the oven and/or on the back of the instruction manual/warranty card.

Important: All repairs must be carried out by CDA authorised service technicians.

Contact CDA Customer Care

A: Customer Care Department, The CDA Group Ltd, Harby Road,
Langar, Nottinghamshire, NG13 9HY

T: 01949 862 012 **F:** 01949 862 003

E: customer.care@cda.eu **W:** www.cda.eu

Energy Efficiency Information

| Attribute | Symbol | Value | Units |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|-------------|-------------------------|
| Model identification | | SK700 | |
| Mass of the appliance | M | 33.6 | kg |
| Energy efficiency index (EEI cavity) | | 87.1 | |
| Energy efficiency class | | A+ | |
| Number of cavities | | 1 | |
| Heat source per cavity (electricity or gas) | | Electricity | |
| Volume per cavity | V | 65 | L |
| Energy consumption (electricity) required to heat a standardised load in a cavity of an electric heated oven during a cycle in conventional mode per cavity (electric final energy) | $EC_{\text{Electric cavity}}$ | 0.99 | kWh/cycle |
| Energy consumption (electricity) required to heat a standardised load in a cavity of an electric heated oven during a cycle in fan-forced mode per cavity (electric final energy) | $EC_{\text{Electric cavity}}$ | 0.67 | kWh/cycle |
| Energy consumption required to heat a standardised load in a gas-fired cavity of an oven during a cycle in conventional mode per cavity (gas final energy) | $EC_{\text{Gas cavity}}$ | N/A | MJ/cycle : kWh/cycle |
| Energy consumption required to heat a standardised load in a gas-fired cavity of an oven during a cycle in fan-forced mode per cavity (gas final energy) | $EC_{\text{Gas cavity}}$ | N/A | MJ/cycle : kWh/cycle |

E & O E. All instructions, dimensions and illustrations are provided for guidance only. CDA reserve the right to change specifications without prior notice.



For service or queries relating to your product please contact:

The Customer Care Department on **01949 862 012** or email customer.care@cda.eu

For more information please contact:

The Sales Department on **01949 862 010** or email sales@cda.eu

Customer Care Department. The CDA Group Ltd, Harby Road, Langar, Nottinghamshire, NG13 9HY
T: 01949 862 012 F: 01949 862 003 E: customer.care@cda.eu