



EVPC91

Corner Extractor

Installation, use and maintenance



Contents:

3	Important
4	Important information
6	Using your extractor
7	Timer function
7	Clean air function
8	Care and maintenance
8	Removing the grease filter
9	Changing/fitting the charcoal filter(s)
10	Changing the light
11 - 17	Installation
11	Installation preparation - height
15	Mounting the extractor
16	Ducting and ventilation
18	Mains electricity connection
19	Electrical information
19 - 20	Troubleshooting
23	Energy Efficiency Information

Important

The CDA Group Ltd cannot be held responsible for injuries or losses caused by incorrect use or installation of this product. Please note that CDA reserve the right to invalidate the guarantee supplied with this product following incorrect installation or misuse of the appliance or use in a commercial environment.

This appliance is not designed to be used by people (including children) with reduced physical, sensorial or mental capacity, or who lack experience or knowledge about it, unless they have had supervision or instructions on how to use the appliance by someone who is responsible for their safety.

Under no circumstances should any external covers be removed for servicing or maintenance except by suitably qualified personnel.

Appliance information:

Please enter the details on the appliance rating plate below for reference, to assist CDA Customer Care in the event of a fault with your appliance and to register your appliance for guarantee purposes.

Appliance Model	
-----------------	--

Serial Number	
---------------	--


EU Declarations of Conformity:

This appliance has been designed, constructed and marketed in compliance with safety requirements of EU Directive 2014/35/EU (LVD)

and requirements of EU Directive 2014/30/EU (EMC).

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2012/19/EU.

At the end of its working life, the product must be taken to a special local authority waste collection centre or to a dealer providing appliance recycling services.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health. It also enables the constituent materials to be recovered, saving both energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin. 

Please note:

- Under no circumstances should the extractor be connected to any gas ventilation system, flue system or hot air ducting system.
- Do not vent the extractor into an attic or loft space.
- Only house the extractor in rooms with adequate ventilation. Remember that the extractor is powerful and whatever air is extracted needs to be replaced.
- Do not tile the extractor in. It should be removable for service or maintenance.
- Do not use silicone sealant to secure the hood to the wall.
- You must be able to isolate the extractor from the mains electrical supply after installation.

-
- This extractor has been designed to be used in a room with a volume of less than 36m³.
 - Steam cleaners must not be used when cleaning this appliance.
 - The performance of your extractor will vary depending on a number of factors. These include: type of extraction, length of ducting, room volume, ventilation available and cleanliness of the filters.

Using your extractor

For best performance, you should switch on the extractor 15 minutes before starting to cook and leave it to run for approximately 15 minutes after the end of cooking (you can use the timer function, detailed on page 7, for this).

Control Panel (Fig. 1)


- A - On (speed 1) and off button
- B - Speed 2 button
- C - Speed 3 button
- D - Intensive speed button
- E - Light button

To switch the extractor lights on or off

- Press the light button (E).

To switch on the extractor and change the speed

- Press button 'A' to switch the unit on. Adjust the speed using buttons 'B', 'C' & 'D'.
- You may notice that the intensive speed (speed 4) indicator flashes when it is selected. This is not a fault (see page 20 for more information).

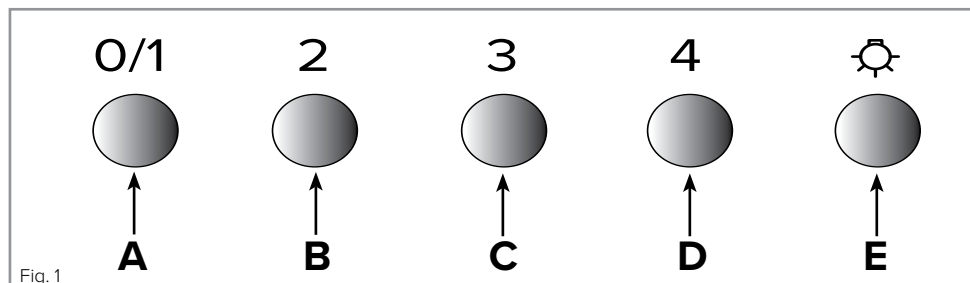

To activate the timer function

- Press and hold the desired speed button for approximately 5 seconds to activate a **15 minute timer** for that speed. The selected speed's indicator should flash. Hold the same button for approximately 5 seconds to cancel the timer. **Please note that the intensive speed automatically switches off after approximately 6 minutes** (see page 20 for more information).

To activate the clean air function

- This extractor is equipped with a clean air function that runs the motor for 10 minutes every hour to help keep the air in the kitchen refreshed.
- To activate the clean air function, touch and hold buttons 'A' and 'B' whilst the appliance is off (on standby). Buttons 'A' and 'B' will flash whilst the motor is not running to indicate that the function is active.
- To switch off the clean air function, simply press button 'A'.

To switch the extractor off

- If the extractor is on speeds 2, 3 or 4 press button 'A' to revert to speed 1. Then, press button 'A' again to switch the unit off. If the extractor is already on speed 1, press button 'A'.

Care and maintenance

IMPORTANT: DO NOT PERFORM MAINTENANCE OR CLEANING OF THE EXTRACTOR WITHOUT FIRST SWITCHING OFF THE ELECTRICITY SUPPLY.

Cleaning

You should use a non-abrasive cleaner. Any abrasive cleaner (including Cif) will scratch the surface and could erase the control panel markings.

You can clean your extractor effectively by simply using a dilute solution of water and mild detergent and drying to a shine with a clean cloth.

IMPORTANT:

Always protect surfaces immediately beneath the extractor (such as a hob) with clean, dry towels or similar cushioning items before carrying out any cleaning or maintenance in case of falling parts/items.

Removing and cleaning the grease filters

The grease filters should be kept clean to minimise the risk of fire. At least once a month you should remove and clean the grease filters with hot soapy water. You can also wash the grease filters in a dishwasher, ensuring that you place it in an upright position to prevent damage from other items in the dishwasher. After rinsing and drying, replace the filters. **Cleaning the grease filters in the dishwasher may lead to discolouration. This is normal and does not constitute a fault with the appliance.**

Please note: After 30 hours of use the light button will flash to signal that the filters need to be cleaned. With the extractor off, press and hold the lamp button until it stops flashing to reset after cleaning.

To remove the grease filters, lift the catch on the handle on the grease filter. It will release at the handle side. Lower it towards you slightly and then remove it completely. To replace the grease filters, repeat the steps in reverse.

Changing the charcoal filter (re-circulating only) - Fig. 2

To ensure best performance of your extractor, you should replace the charcoal filter every four to six months, depending on use. To attach a new charcoal filter, first remove the middle grease filter. Remove any old charcoal filter that is in place by sliding it out using the tab. Take a new charcoal filter and slide it into position as per Fig. 2. **Ensure the tab is left accessible** - the tab on the new filter should be visible once inserted. Then, re-fit the grease filter.

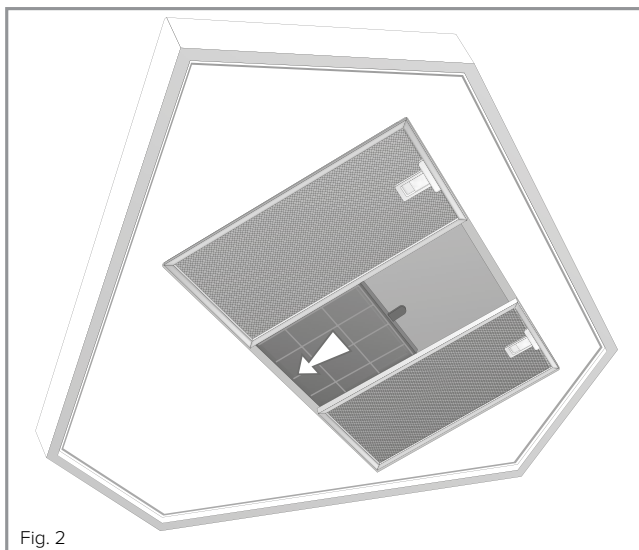


Fig. 2

Changing the light bulbs

If one or more of your LED units fail, please contact CDA Customer Care using the contact details below to arrange a service visit.

Contact CDA Customer Care

A: Customer Care Department, The CDA Group Ltd, Harby Road,
Langar, Nottinghamshire, NG13 9HY

T: 01949 862 012

F: 01949 862 003

E: customer.care@cda.eu

W: www.cda.eu

Installation

When installing this product we strongly recommend you seek the help of at least one other individual. This product may have some sharp edges. Please take care and wear adequate PPE when handling.

Installation preparation - height

When the extractor is to be installed above a **CDA electric hob**, the minimum distance between the hob and **the bottom edge of the extractor** must exceed 650mm.

When the extractor is to be installed above a **CDA gas hob**, the minimum distance between **the bottom edge of the extractor** and hob must exceed 650mm.

If the instructions provided with your gas hob state that the required distance between the hob and extractor must be greater than our measurement, then that is the distance that should be observed; this is a legal requirement and may lead to your hob being disconnected from the gas supply and the installation being reported under RIDDOR (the height should be measured from the top of the burners).

IN THE ABSENCE OF ANY INSTRUCTIONS SUPPLIED WITH THE GAS HOB, THE MINIMUM DISTANCE BETWEEN THE HOB AND EXTRACTOR MUST BE AT LEAST 760mm. The width of any hob must not be greater than the width of the extractor installed above it.

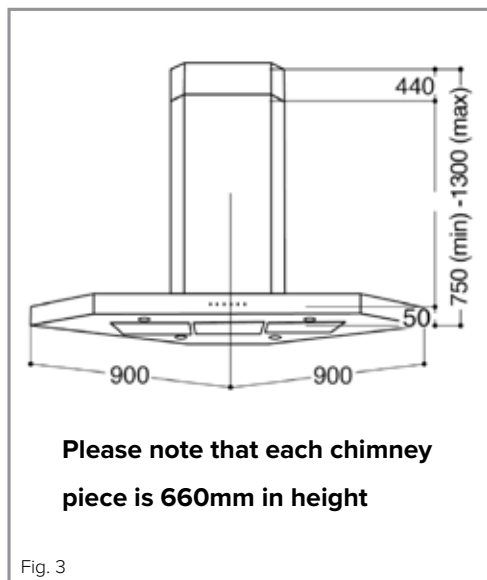


Fig. 3

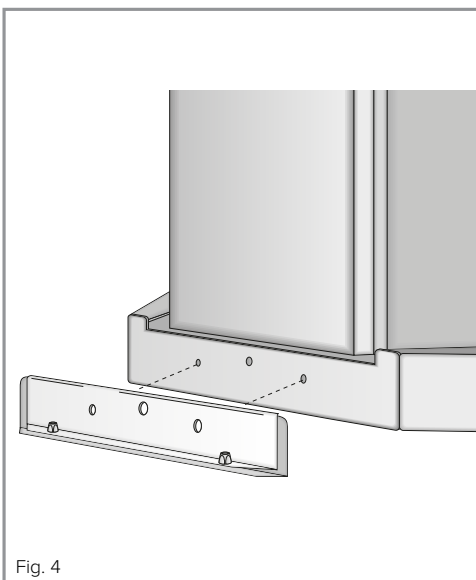


Fig. 4


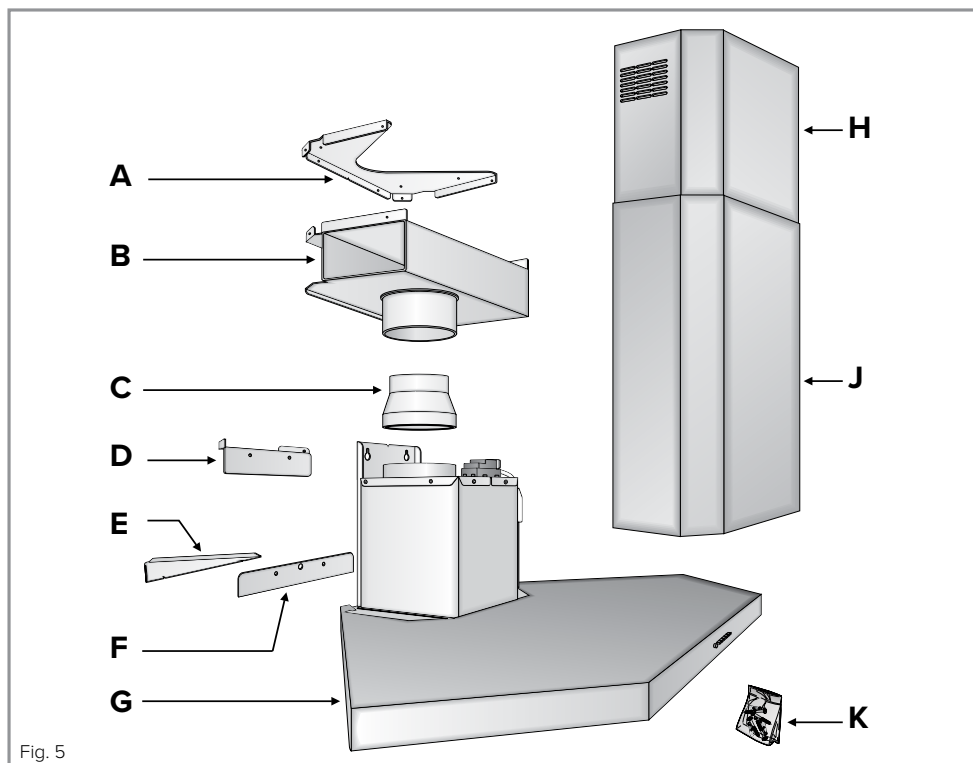


Fig. 5

There are images on page 12 showing the extractor dimensions (Fig. 3) and an exploded view of the installation components. (Fig. 5). These are intended to help with installing the extractor.

Place the extractor on a surface that has been sufficiently protected to prevent damage to the surface and/or extractor. Fit bracket F in Fig. 5 to the bottom of the rear of the extractor as per Fig. 4. You will need to remove two flat-headed screws first and then use these screws to secure the bracket. When fitting the bracket, please note that the centre hole on the bracket should align with the rivet on the extractor.

Lie the extractor on its back so that the grease filters and lamps are accessible. Remove the grease filters and remove the four screws highlighted in the images below:

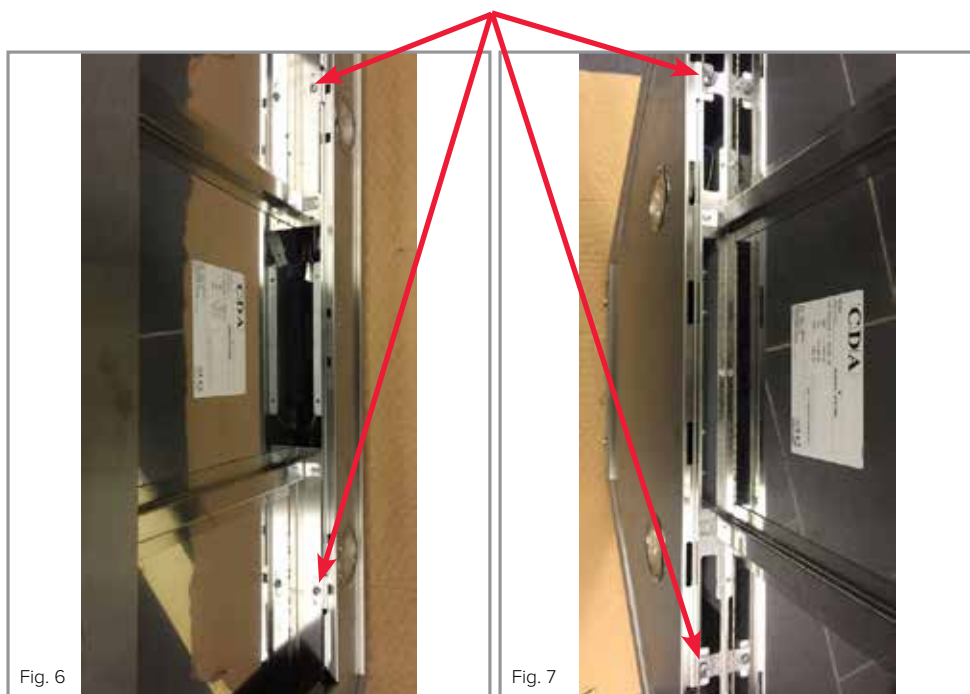

The underside panel can now be removed. Manoeuvre it out of position and disconnect the lamp connectors. Place the panel (Fig. 8) somewhere safe where it will neither cause nor receive damage.

Fit bracket D in Fig. 5 to the top of the motor group as per Fig. 9.

Taking into account the extractor dimensions, and the advice regarding installation height as per page 11, lift the appliance into its approximate position and mark out the mounting holes for the bracket in Fig. 9.

Whilst the people helping you support the extractor, mark out the side support holes. There are two along the left side and two along the right side. Two of these holes are shown in Fig. 10. Please note that you may have to move some of the wiring to properly access these holes.



Fig. 8

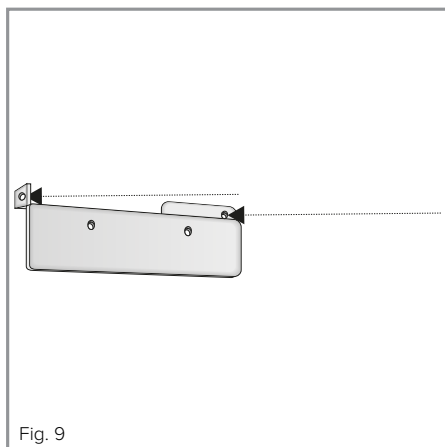


Fig. 9

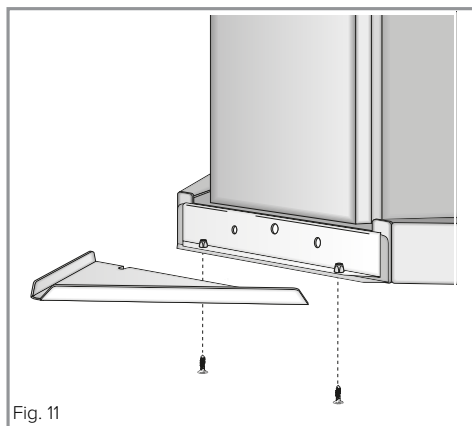


Fig. 10

Mounting the extractor

IMPORTANT: Before cutting/drilling through any surfaces, ensure that adequate measures have been taken to ensure no electrical cables or similar lie above/behind.


There should be six holes marked out on the wall to be drilled; two for the bracket and four for the side support holes. Proceed to drill out the marked holes. If you are using the supplied wall plugs and screws, an Ø8mm drill bit should suffice. Insert the wall plugs.



Fit the corner blanking plate (E in Fig. 5 on page 12) by securing it to the bracket on the rear of the extractor as per Fig. 11. You can remove the protective film now or after installation is complete.

Lift the extractor back into position against the wall. Secure the extractor to the corner wall bracket as per Fig. 12. Continue to support the extractor's weight.

Secure the extractor sides to the walls through the four holes (two of which are shown in Fig. 10) using four supplied M5 x 40mm screws.

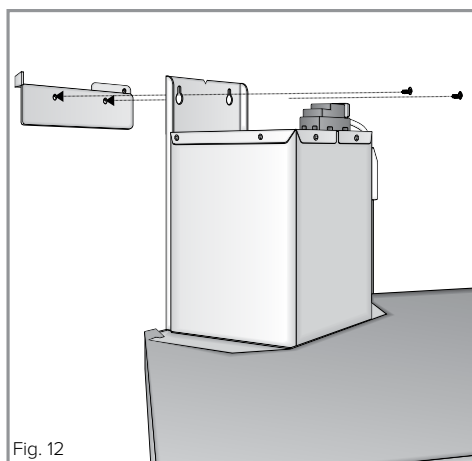

Ducting, ventilation and final steps

For best performance and lowest noise output, we recommend the use of 150mm ducting. You can also use smaller diameter ducting but this will reduce performance and potentially increase the noise level of the extractor whilst in use. In general, the less ducting you use (i.e. distance and bends) the more efficient your extractor will be.

IMPORTANT: Before cutting/drilling through any surfaces, ensure that adequate measures have been taken to ensure no electrical cables or similar lie above/behind.


Fit the 120mm ducting adaptor (C in Fig 5 on page 12) to the motor outlet if required. If you are recirculating, then you will need 150mm ducting to attach to the recirculating bracket piece.

If you are venting the extracted air to the outside, fit the chimney bracket marked as 'A' in Fig. 5 on page 12 as close to the ceiling as possible whilst bearing in mind the maximum install height as per Fig. 3 on page 12. **Please note that this bracket can also be ceiling-mounted.** You will need four of the supplied wall plugs and M5 x 40mm screws to secure this bracket. Use an 8mm drill bit to prepare the holes.


If you are recirculating the extracted air back into the kitchen, fit the recirculating bracket piece marked as 'B' in Fig. 5 on page 12 as close to the ceiling as possible whilst bearing in mind the maximum install height as per Fig. 3 on page 12. You will need four of the supplied wall plugs and M5 x 40mm screws to secure this bracket. Use an 8mm drill bit to prepare the holes.

Secure the ducting to the motor outlet using a jubilee clip or similar. If you are recirculating the extracted air, fix the ducting to the recirculating bracket piece, as per Fig. 13. Use a jubilee clip or similar.

Place the chimney sections on the extractor, taking care not to damage either the sections or the extractor.

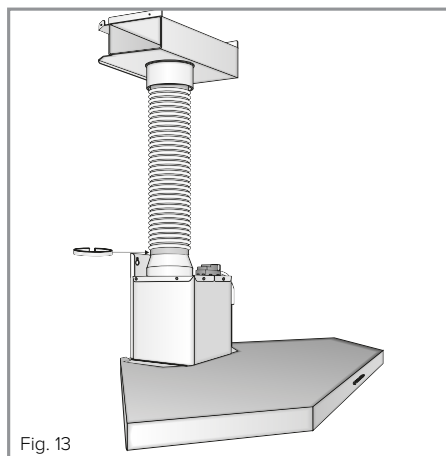

Raise the inner section up as far as necessary to meet the support bracket that is being used. Secure the upper chimney section to the support bracket as per Fig. 14 using the two supplied M3.9 x 9.5mm screws.

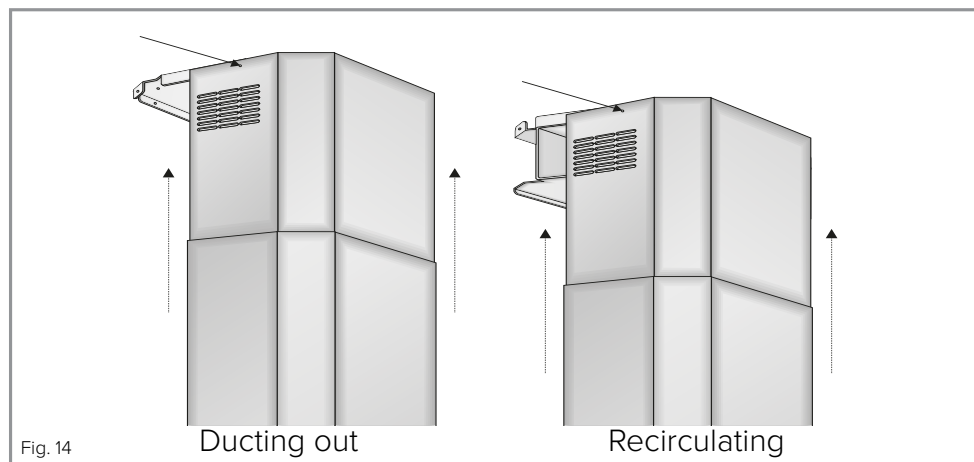


Reattach the panel and lamp connections (that were removed as per pages 13 and 14) and re-insert the four screws. Test that everything works.

Mains electricity connection

THIS APPLIANCE MUST BE CONNECTED TO THE MAINS SUPPLY BY A COMPETENT PERSON, USING FIXED WIRING VIA A DOUBLE POLE SWITCHED FUSED SPUR OUTLET AND PROTECTED BY A 3A FUSE.

We recommend that the appliance is connected by a qualified electrician, who is a member of the N.I.C.E.I.C. and who will comply with the I.E.E. and local regulations.

The wires in the mains lead of this appliance are coloured in accordance with the following code:

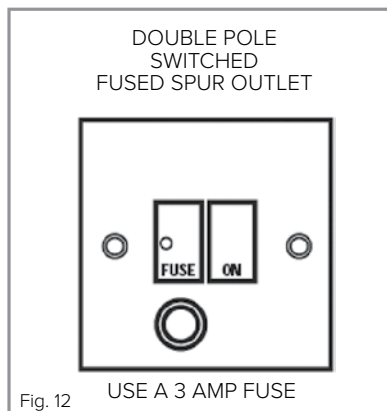

BLUE = NEUTRAL, BROWN = LIVE, GREEN+YELLOW = EARTH

As the colours of the wires in the mains lead for the appliance may not correspond with the coloured markings identifying the terminals connecting to the fused spur, proceed as follows:

- The wire which is coloured blue must be connected to the terminal marked N (Neutral), or coloured black.
- The wire which is coloured brown must be connected to the terminal marked L (Live), or coloured red.
- The wire which is coloured green and yellow must be connected to the terminal marked E (Earth) or coloured green or green and yellow.

Assembly and electrical connection should be carried out by competent personnel.

Do not mount the isolation switch behind the chimney section. It is a requirement that you must be able to isolate the extractor from the mains electrical supply after installation.

Electrical information

Mains electrical voltage: 230 – 240Vac.

Total rated power consumption: 281W

Troubleshooting

If your extractor is not working:

1. Check that the mains supply has not been switched off.
2. Check that the fuse in the spur has not blown.

If your lights are not working:

1. Check that the mains supply has not been switched off.
2. Check whether the extractor still extracts on any speed. If not, check the fuse, as above. If the lights still do not work, contact CDA Customer Care using the details on page 20.

(continued on page 20)

If you notice speed 4 reverting to speed 3 after approximately 6 minutes:

This is not a fault. Regulations issued by the European Commission in January 2015 dictate that internal motor extractors with a maximum air capacity higher than 650m³/h must be equipped with a timer device that automatically switches the speed from '4th', or intensive, to 3rd after 6 minutes of operation.

If the light button is flashing:

This is not a fault. After 30 hours of usage the light button will flash to signal that the grease filter needs to be cleaned. Press and hold the light button to reset after cleaning.

If any of the potential resolutions in this guide do not resolve your issue, please contact CDA Customer Care using the contact details below.

Contact CDA Customer Care

A: Customer Care Department, The CDA Group Ltd, Harby Road,
Langar, Nottinghamshire, NG13 9HY

T: 01949 862 012

F: 01949 862 003

E: customer.care@cda.eu

W: www.cda.eu

NOTES:

NOTES:

Energy Efficiency Information

Attribute	Symbol	Value	Units
Model Identification		EVPC91	
Annual Energy Consumption	AEC_{Hood}	57	kWh
Time increase factor	f	1.03	
Fluid Dynamic Efficiency	FDE_{Hood}	27.1 (B)	
Energy Efficiency Index	EEl_{Hood}	59 (B)	
Measured airflow at Best Efficiency Point	Q_{BEP}	290.5	m^3/h
Measured Pressure at Best Efficiency Point	P_{BEP}	468	Pa
Maximum airflow	Q_{MAX}	689	m^3/h
Measured electric power at Best Efficiency Point	W_{BEP}	139.5	W
Nominal lighting power	WL	6	W
Average illumination of the lighting system on the cooking surface	E_{Middle}	228	Lux
Measured power consumption in standby	P_S	0.45	W
Measured power consumption off mode	P_O	0	W
Sound power level	L_{WA}	60	dBA
Grease Filter Efficiency	GFE_{Hood}	91 (B)	%
Lamp efficiency	LE_{Hood}	36 (A)	%

E & O E. All instructions, dimensions and illustrations are provided for guidance only. CDA reserve the right to change specifications without prior notice.



For service or queries relating to your product please contact:

The Customer Care Department on **01949 862 012** or email customer.care@cda.eu

For more information please contact:

The Sales Department on **01949 862 010** or email sales@cda.eu

Customer Care Department. The CDA Group Ltd, Harby Road, Langar, Nottinghamshire, NG13 9HY
T: 01949 862 012 F: 01949 862 003 E: customer.care@cda.eu